

RAZOR Heater




Installation Guide

Wide Open Company, Inc.

**19006 River Road
Grand Rapids, MN 55744
218-327-9722
Toll Free 888-927-9722
Fax 218-327-9658
www.wideopenco.com**

1. Remove Hood and Storage Basket.
2. Locate the existing 7/16" holes in the Firewall (See Template) Before applying template cut or punch out the (2) locating holes, with that done you can apply the template as shown in ****Photo 1****
3. Now cut out the Rectangular Hole and drill the holes in the template as shown in ****Photo 2****
4. Place and hold the heater core box inside vehicle, mount the box using the lower blower retaining bracket on the outside of the firewall using the 8-32 x 3/4" fasteners as shown in ****Photo 3****. (do not put in the upper fasteners at this time.)
5. Disconnect the lower radiator hose and drain system. Install a "Tee" using a piece of 1" hose supplied with the kit, ****Photo 4**** 3/4" hose will be routed to the top connection on the heater core.
6. Install another "Tee" in the upper radiator hose as shown in ****Photos 5 & 6****. Then route the 3/4" hose to the lower connection on the heater core.
7. Slide the Blower into the Retaining bracket installed in step 4. Fasten the top of the blower into place using 3 8-32 x 3/4" fasteners. Run the wiring under the dash following the factory wiring.
8. Bolt the ground wire to the dash brace bracket using a 1/4 x 20 fastener. Hook the Red wire with the bullet terminal to the existing orange wire with a female bullet connector. (Located under dash) ****Photo 8****
9. Using the template shown in ****Photo 9**** cut out for the defrost vent. Mount the defrost vent in place using the hardware provided. Route the duct hose from the defrost vent to the center outlet on the heater.
10. Put the (2) 360 degree vents on the outer outlets of the heater.
11. It is now time to fill and bleed the coolant system, have patience and check system levels often until you have all air removed from the system.

Stay Warm!!!

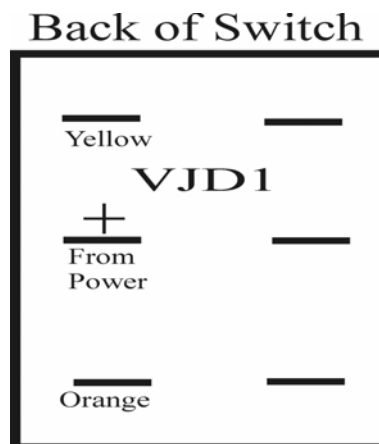

Red from heater is Medium
and won't be used.
Black from heater is Ground



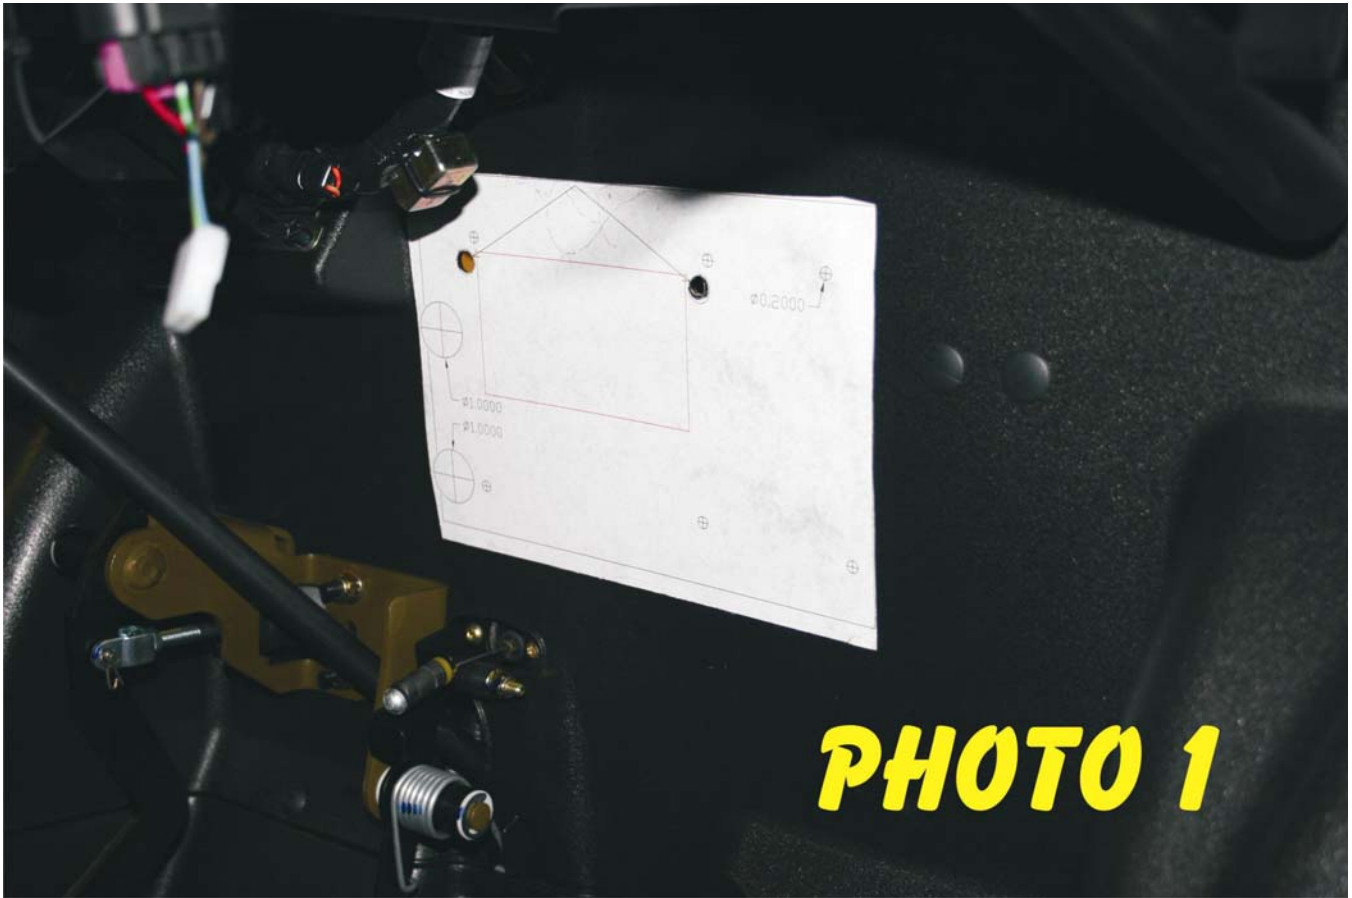


PHOTO 1

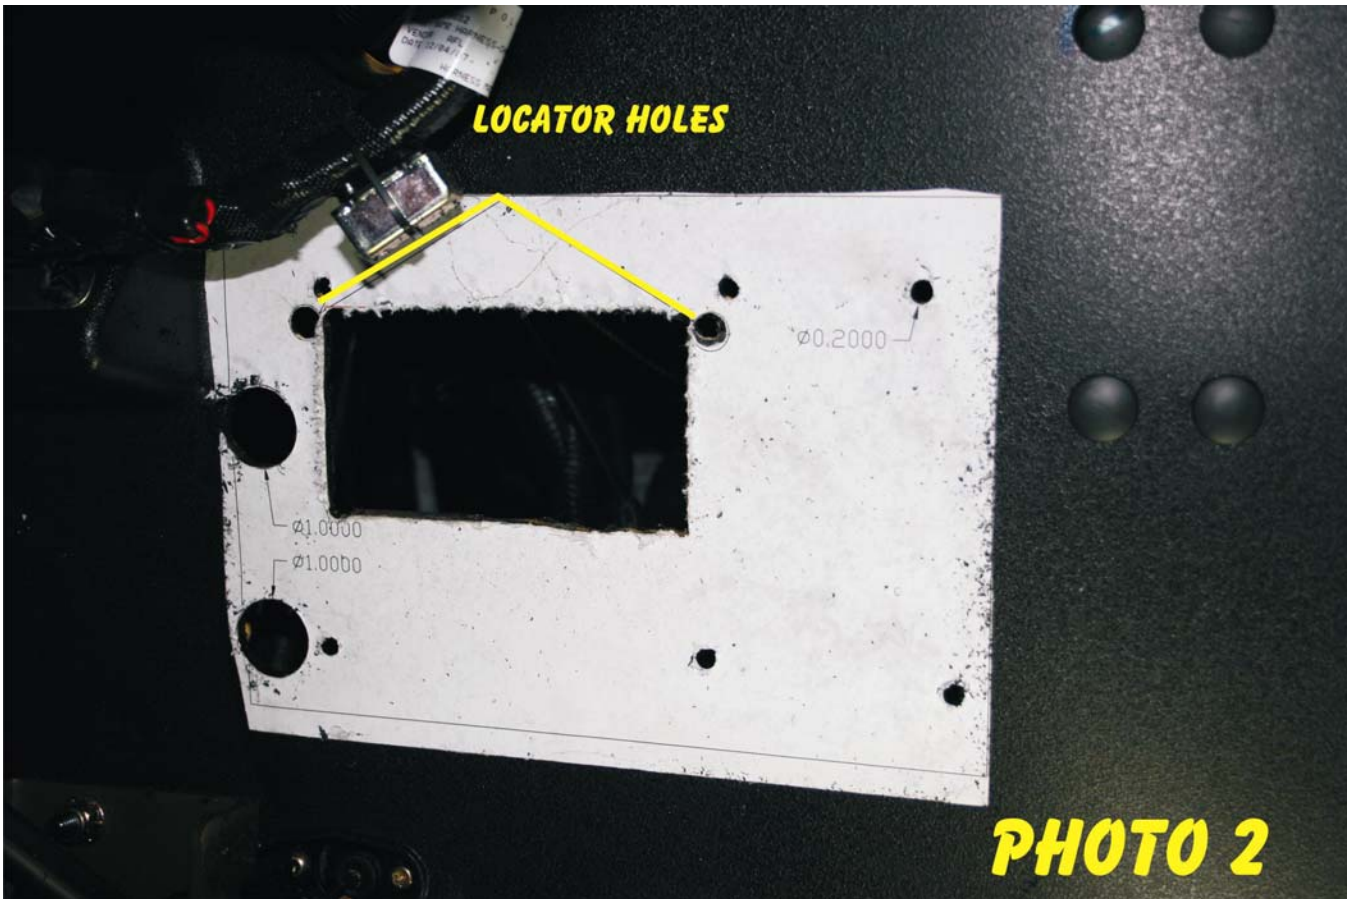

LOCATOR HOLES

PHOTO 2

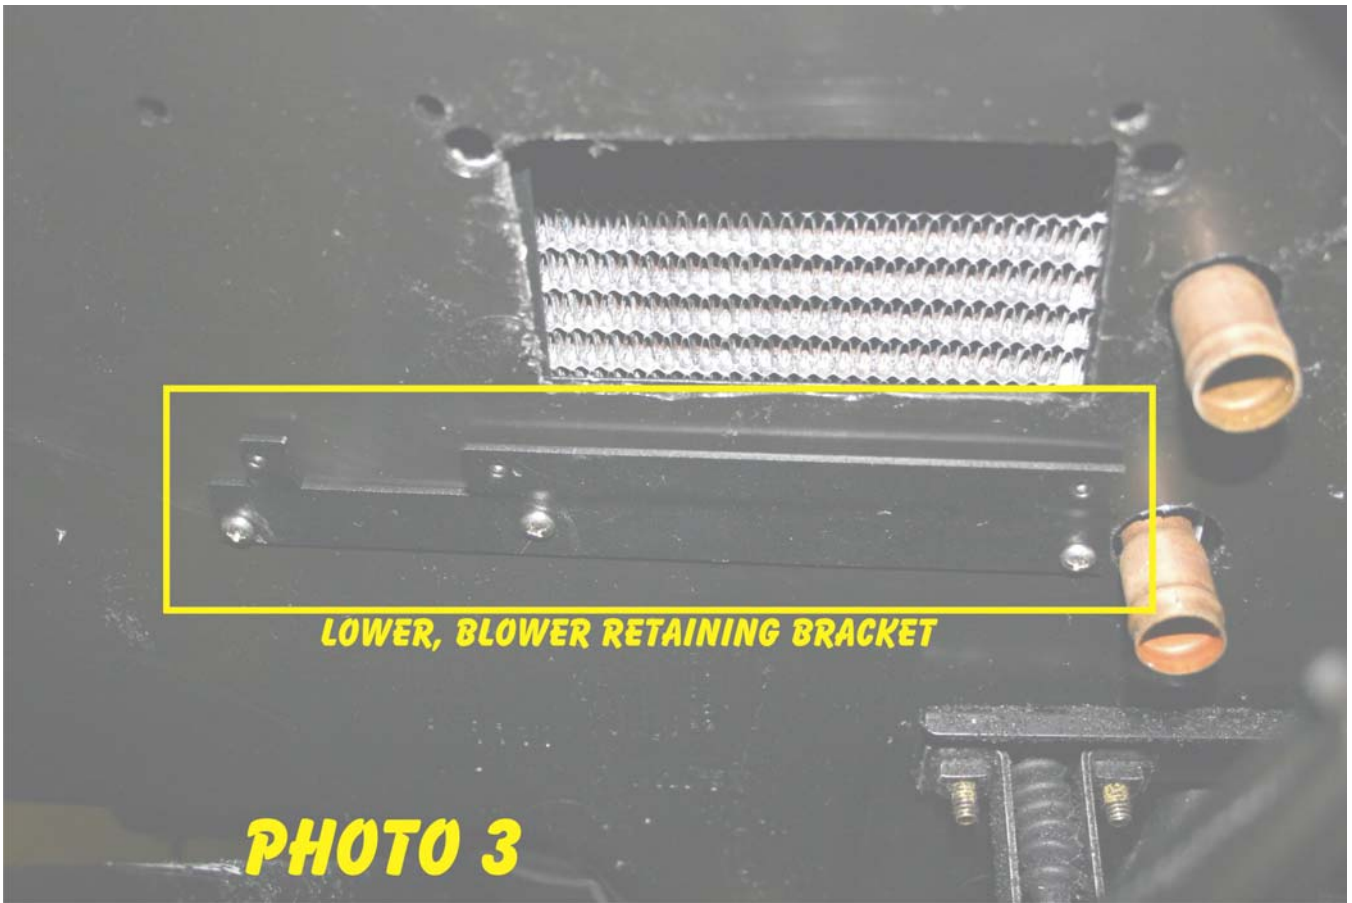

LOWER, BLOWER RETAINING BRACKET


PHOTO 3



SLIDE FOAM RINGS ONTO CORE CONNECTIONS.

PHOTO 3A

PHOTO 4

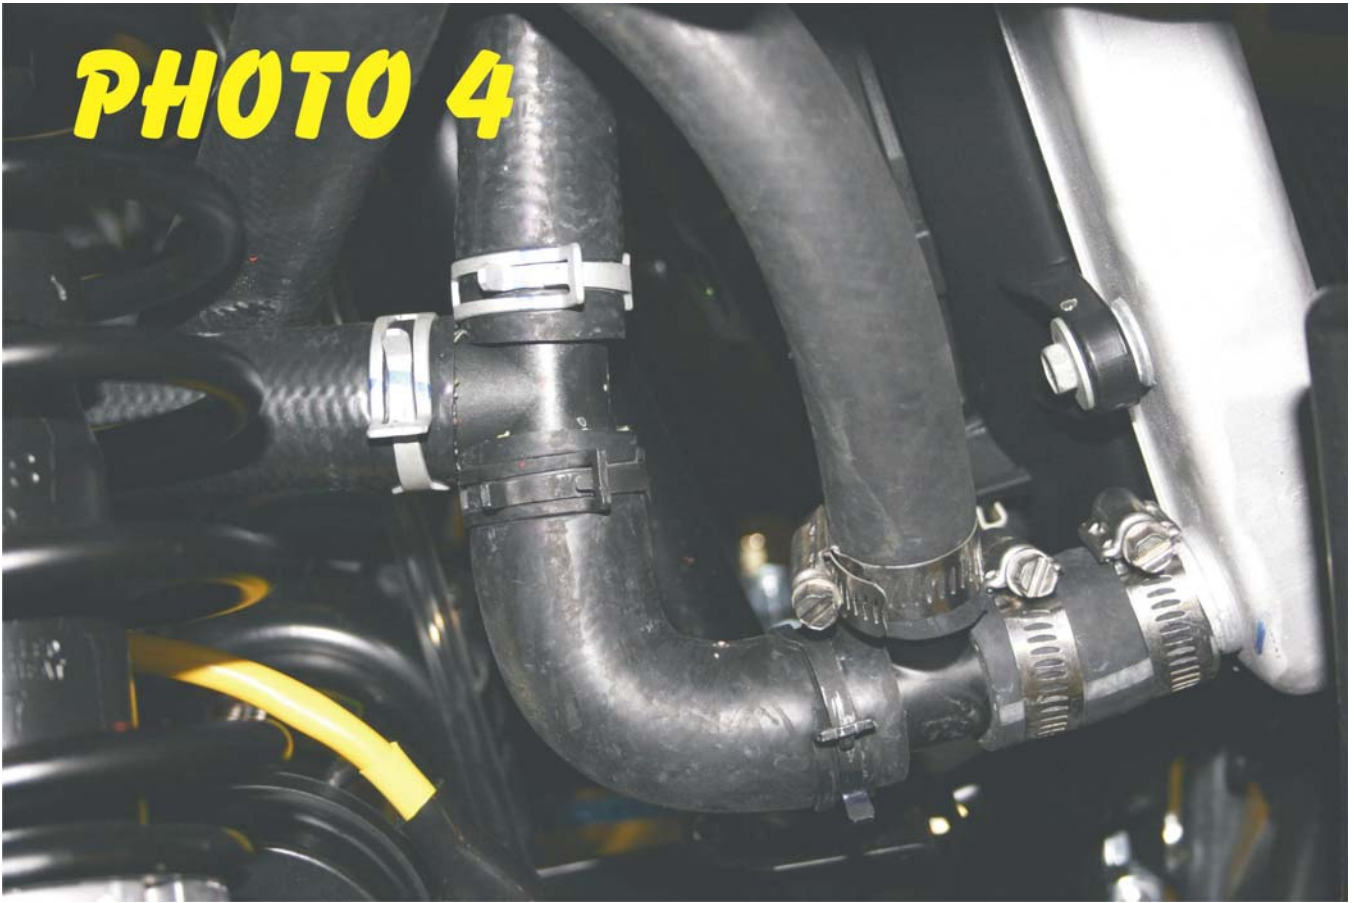

INSTALL "TEE" HERE

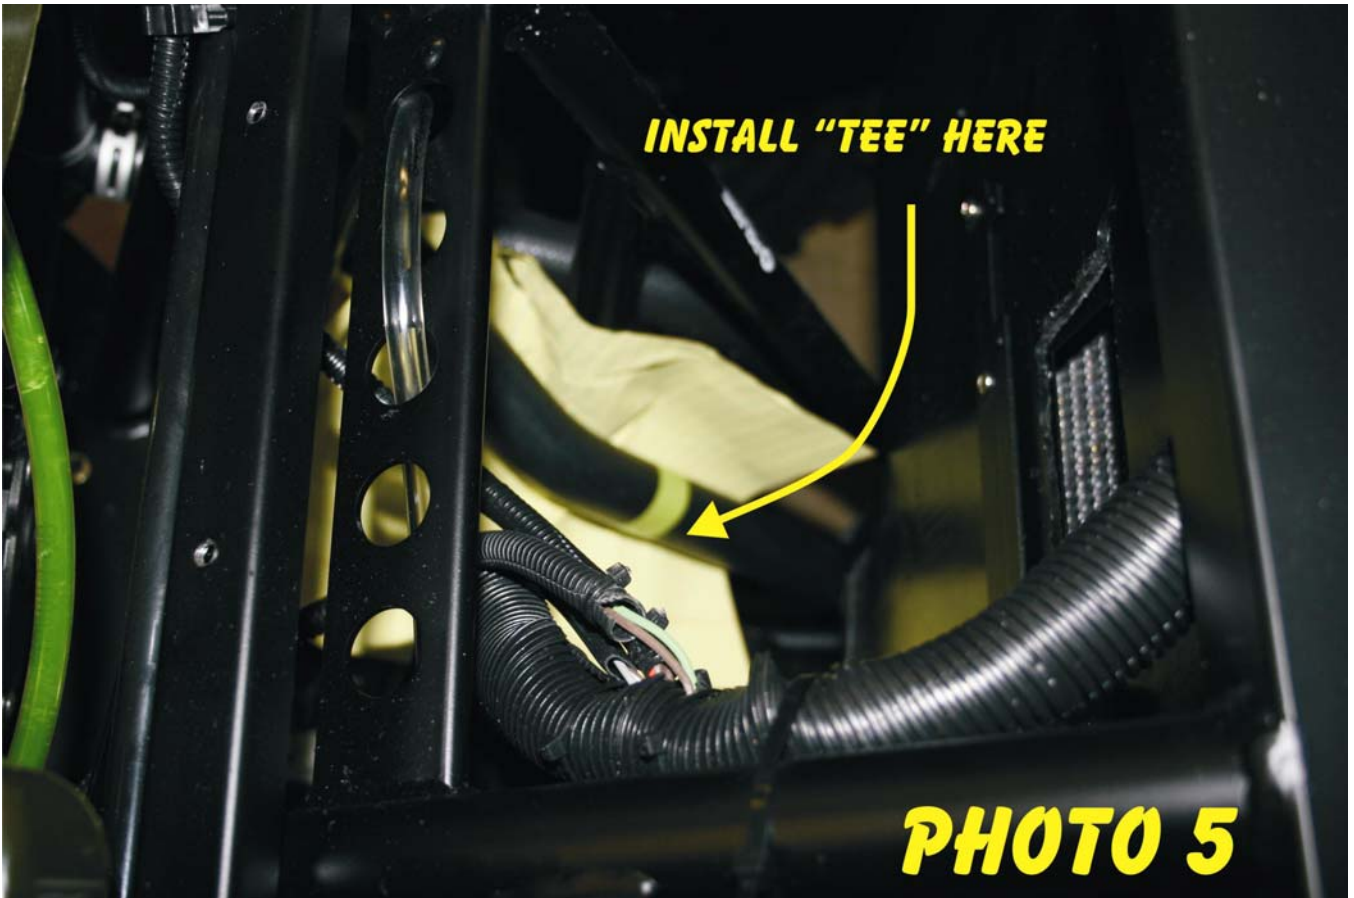


PHOTO 5



PHOTO 6



PHOTO 7


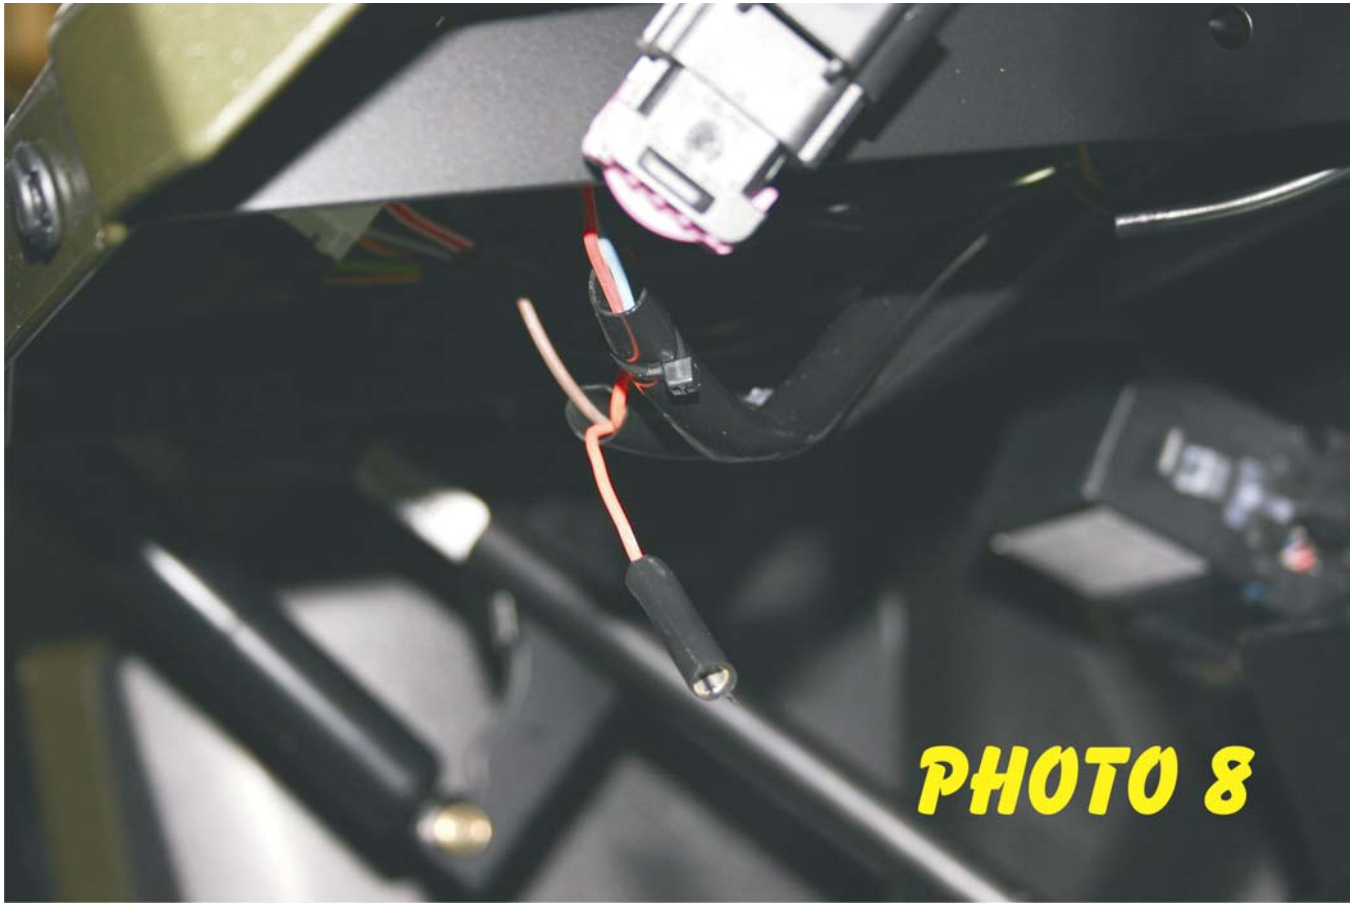


PHOTO 8



PHOTO 9

RZR Heater Template

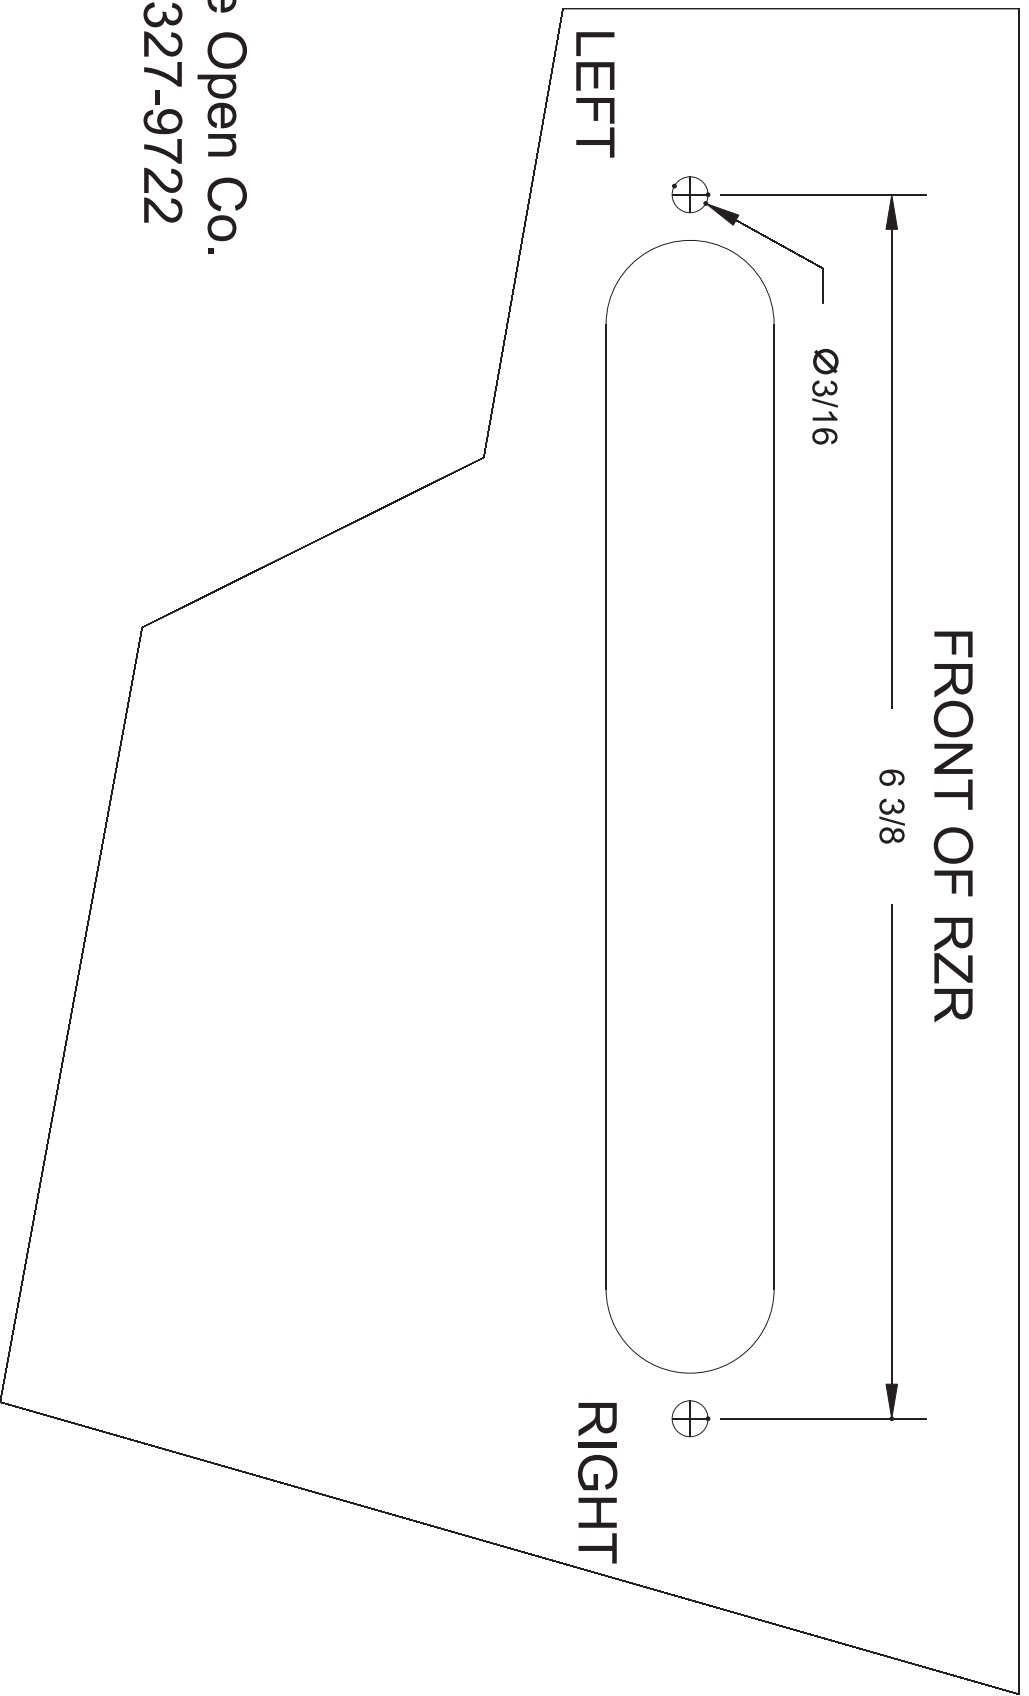

Wide Open Co.
218-327-9722

punch holes & cut out around outside of template before locating on firewall

