

THERMO KING TRUCK, TRAILER, CR AND DAS ALARM CODES

THIS DOCUMENT SHOWS ALL CURRENT TRUCK, TRAILER, CR AND DAS ALARM CODES. NOT ALL CODES ARE POSSIBLE ON ALL UNITS.

IF THE ALARM APPLIES TO A MULTI-TEMP ZONE, THAT ZONE WILL BE IDENTIFIED.

BE SURE TO RECORD ALL ALARMS THAT OCCUR. THEY ARE VALUABLE TO THE SERVICE TECHNICIAN.

ALARM CODE NUMBERS MARKED WITH PARENTHESES (XX) MAY EXIST WITH ALARM CODE 84 AND MAY CLEAR AUTOMATICALLY.

COLOR CODE DEFINITIONS	OK TO RUN	CHECK AS SPECIFIED	TAKE IMMEDIATE ACTION
THESE ARE SUGGESTIONS ONLY. ALWAYS CONSULT YOUR COMPANY FOR FINAL DECISIONS.			
Num	Color	Description	Operator Action
00		No Alarms Exist	No action required.
02		Check Evaporator Coil Sensor (Zone)	Manually monitor temperature. Report alarm at end of day.
03		Check (Control) Return Air Sensor (Zone)	Manually monitor temperature. Report alarm at end of day.
04		Check (Control) Discharge Air Sensor (Zone)	Manually monitor temperature. Report alarm at end of day.
05		Check Ambient Temp Sensor	Report alarm at end of day.
06		Check Coolant Temp Sensor	Report alarm at end of day.
07		Check Engine RPM Sensor	Report alarm at end of day.
08		Unit Running on Coil Sensor (Zone)	Manually monitor temperature. Report alarm at end of day.
(09)		High Evaporator Temperature (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(10)		High Discharge Pressure (or Temperature)	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
11		Unit or Zone Controlling on Alternate Sensor (Zone)	Manually monitor temperature. Report alarm at end of day.
12		Sensor or Digital Input Shutdown (Zone)	Unit/zone cannot operate and is shut down. Repair immediately.
13		Sensor Check (Zone)	Manually monitor temperature. Report alarm at end of day.
14		Defrost Terminated by Time	Report alarm at end of day.
15		Check Glow Plugs or Intake Air Heater	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
16		Manual Start Not Completed	Report alarm at end of day.
(17)		Engine Failed to Crank	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
(18)		High Engine Coolant Temperature	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
(19)		Low Engine Oil Pressure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
(20)		Engine (Vapor Motor CR) Failed to Start	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(21)		Cooling Cycle Check (Zone)	Manually monitor temperature. Report alarm at end of day.
(22)		Heating Cycle Check (Zone)	Manually monitor temperature. Report alarm at end of day.
23		Cooling Cycle Fault (Zone)	Unit/zone cannot operate and is shut down. Repair immediately.
24		Heating Cycle Fault (Zone)	Unit/zone cannot operate and is shut down. Repair immediately.
25		Alternator Check	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(26)		Check Refrigeration Capacity (Zone)	Manually monitor temperature. Report alarm at end of day.
(27)		Vapor Motor RPM High (CR)	Unit cannot operate and is shut down. Repair immediately.
28		Pretrip or Self Check Abort	Report alarm at end of day.
29		Defrost Damper Circuit Check (Zone)	Manually monitor temperature. Report alarm at end of day.
30		Defrost Damper Stuck Closed (Zone)	Unit/zone cannot operate and is shut down. Repair immediately.
31		Check Oil Pressure Switch	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
32		Refrigeration Capacity Low (Zone)	Unit/zone cannot operate and is shut down. Repair immediately.
33		Check Engine RPM	Report alarm at end of day.
34		Check Modulation Circuit	Manually monitor temperature. Report alarm at end of day.
35		Check Run Relay Circuit	Unit cannot operate and is shut down. Repair immediately.
(36)		Electric Motor Failed to Run	Unit cannot operate and is shut down. Repair immediately. Switch to Diesel Mode
37		Check Engine Coolant Level	Report alarm at end of day.
38		Electric Phase Reversed	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
39		Check Water Valve Circuit	Manually monitor temperature. Report alarm at end of day.
40		Check High Speed Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
41		Check Engine Coolant Temp	Report alarm at end of day.
42		Unit Forced to Low Speed	Report alarm at end of day.
43		Unit Forced to Low Speed Modulation	Report alarm at end of day.
44		Check Fuel System	Add fuel as necessary. Otherwise, report alarm at end of day.
45		Check Hot Gas or Hot Gas Bypass Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
46		Check Air Flow (Zone)	Manually monitor temperature. Report alarm at end of day.
47		Remote Sensor Shutdown	Unit/zone cannot operate and is shut down. Repair immediately.
48		Check Belts or Clutch	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
49		Check Spare Sensor 1	Report alarm at end of day.
50		Reset Clock	Report alarm at end of day.
51		Check Shutdown Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
52		Check Heat Circuit (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
53		Check Economizer Valve Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
54		Test Mode Timeout	Clear alarm and restart unit.
55		Check Engine Speeds	Report alarm at end of day.
56		Check Evaporator Fan Low Speed (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
57		Check Evaporator Fan High Speed (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
61		Low Battery Voltage	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
62		Ammeter Out of Calibration	Unit cannot operate and is shut down. Repair immediately.
(63)		Engine or Vapor Motor Stopped	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
64		Pretrip Reminder	Report alarm at end of day.
65		Abnormal Temperature Differential (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
66		Low Engine Oil Level	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
67		Check Liquid Line Solenoid Circuit (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
68		Internal Controller Fault Code	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
70		Hourmeter Failure	Report alarm at end of day.
71		Hourmeter 4 Exceeds Set Time Limit	Report alarm at end of day.
72		Hourmeter 5 Exceeds Set Time Limit	Report alarm at end of day.
73		Hourmeter 6 Exceeds Set Time Limit	Report alarm at end of day.
74		Controller Reset to Defaults	Report alarm at end of day.
75		Controller RAM Failure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
76		Controller EPROM Failure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
77		Controller EPROM Checksum Failure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
78		Data Log EPROM Failure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
79		Internal Data Logger Overflow	Report alarm at end of day.
80		Check Compressor Temp Sensor	Report alarm at end of day.
81		High Compressor Temp	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
82		High Compressor Temp Shutdown	Unit cannot operate and is shut down. Repair immediately.
83		Low Engine Coolant Temp	Report alarm at end of day.
84		Restart Null	Report alarm at end of day.
85		Forced Unit Operation	Report alarm at end of day.
86		Check Discharge Pressure Sensor	Report alarm at end of day.
87		Check Suction Pressure Sensor	Report alarm at end of day.
88		Reserved for CR	
89		Check Electronic Throttling Valve (ETV) Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
90		Electric Overload	If unit is shut down repair immediately. Otherwise, report alarm at end of day.

COLOR CODE DEFINITIONS	OK TO RUN	CHECK AS SPECIFIED	TAKE IMMEDIATE ACTION
-------------------------------	------------------	---------------------------	------------------------------

THESE ARE SUGGESTIONS ONLY. ALWAYS CONSULT YOUR COMPANY FOR FINAL DECISIONS.

Num	Color	Description	Operator Action
91		Check Electric Ready Input	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
92		Sensor Grades Not Set (Zone)	Report alarm at end of day.
93		Low Compressor Suction Pressure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
94		Check Loader #1 Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
95		Check Loader #2 Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
96		Low Fuel Level	Add fuel as required.
97		Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
98		Check Fuel Level Sensor	Report alarm at end of day.
99		High Compressor Pressure Ratio	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(100)		Heater Fan Failure (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
101		Controlling on Evap Coil Outlet Temp (CR)	Manually monitor temperature. Report alarm at end of day.
(102)		Low Evaporator Coil Temperature (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
103		Low Heater Fuel Level (CR)	Manually monitor temperature. Report alarm at end of day.
104		Check Remote Fan Speed (Zone)	Manually monitor temperature. Report alarm at end of day.
105		Check Receiver Tank Press Sol Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
106		Check Purge Valve Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
107		Check Condenser Inlet Sol Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
108		Door Open Timeout (Zone)	Close doors. Report alarm at end of day.
109		Check High Discharge Pressure Sensor	Replaced by Alarm Code 86
110		Check Suction Line Sol Circuit (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
111		Unit Not Configured Correctly (Zone)	Report alarm at end of day.
112		Check Remote Fans (Zone)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
113		Check Electric Heat Circuit (Zone)	Manually monitor temperature. Report alarm at end of day.
114		Multiple Alarms - Can Not Run (Zone)	Unit/zone cannot operate and is shut down. Repair immediately.
115		Check High Pressure Cut Out Switch	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
116		Check High Pressure Cut In Switch	Report alarm at end of day.
117		Auto Switch from Diesel to Electric	Normal operation – does not affect performance.
118		Auto Switch from Electric to Diesel	Normal operation – does not affect performance.
119		Reserved for CR	
120		Check Alternator Excite Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
121		Check PMW Liquid Injection Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
122		Check Diesel/Electric Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
123		Check Evap Coil Inlet Temp Sensor (CR)	Manually monitor temperature. Report alarm at end of day.
124		Check Evap Coil Outlet Temp Sensor (CR)	Report alarm at end of day.
125		Check Tank Level Sensor (CR)	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
126		Check Back Pressure Regulator (CR)	Manually monitor load temperature. Report this alarm at the end of the day.
127		Setpoint Not Entered (Zone)	Be sure setpoint is adjusted to required temperature.
128		Engine Run Time Maint Reminder #1	Report alarm at end of day.
129		Engine Run Time Maint Reminder #2	Report alarm at end of day.
130		Electric Run Time Maint Reminder #1	Report alarm at end of day.

131		Electric Run Time Maint Reminder #2	Report alarm at end of day.
132		Total Unit Run Time Maint Reminder #1	Report alarm at end of day.
133		Total Unit Run Time Maint Reminder #2	Report alarm at end of day.
134		Controller Power On Hours	Report alarm at end of day.
135		Check Spare Digital Inputs	Report alarm at end of day.
136		Check Spare Digital Outputs	Report alarm at end of day.
137		Check Damper Motor Heater Output	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
138		Log DAS Real Time Clock Battery Failure (DAS)	Report alarm at end of day.
139		Abort Evacuation Mode	Report alarm at end of day.
140		Not currently used	
141		Auto Switch Diesel to Electric Disabled	Report alarm at end of day.
142		Check Thermax Valve	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
143		Check Remote Drain Hose Heater Output (Zone)	Report alarm at end of day.
144		Lost CAN Communications to Expansion Module	Unit cannot operate and is shut down. Repair immediately.
145		Lost Controller ON Feedback Signal	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
146		Software Version Mismatch	Report alarm at end of day.
147		Check Multi-Temp Fan Speed Control Output (Zone)	Manually monitor load temperature. Report this alarm at the end of the day.
148		Auto Switch Electric to Diesel Disabled	Report alarm at end of day.
149		Alarm Not Identified	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
150		Sensor Out of Range Low (DAS and HMI) (Zone)	Report alarm at end of day.
151		Sensor Out of Range High (DAS and HMI) (Zone)	Report alarm at end of day.
152		DAS Failed Sensor (DAS)	Report alarm at end of day.
153		Expansion Module Flash Load Failure	Report alarm at end of day.
154		Low Suction Pressure Switch Failure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
155		Lost CAN Communications to HMI	Unit cannot operate and is shut down. Repair immediately.
156		Check Suction/Liquid Heat Exchanger Bypass Valve	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
157		OptiSet Plus Profile Mismatch	Report alarm at end of day.
158		Primary Software Failed to Load	Report alarm at end of day.
159		Check Battery Condition	Report alarm at end of day.
160		Lost CAN Communications to Radio Expansion Board	Report alarm at end of day.
161		Log DAS Real Time Clock Invalid (DAS)	Report alarm at end of day.
180		TriPac Compressor Alarm	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
188		Log DAS Microprocessor Fault (DAS)	Report alarm at end of day.
203		Check Display Return Air Sensor (Zone)	Manually monitor temperature. Report alarm at end of day.
204		Check Display Discharge Air Sensor (Zone)	Manually monitor temperature. Report alarm at end of day.
216		Check DAS Digital Inputs (DAS)	Report alarm at end of day.
233		REB Transitioning from Conservative to Full Null	Report alarm at end of day.
234		Check Relative Humidity Sensor Circuit	Report alarm at end of day.
250		DAS Clock Time Reset (DAS)	Report alarm at end of day.
251		Check Radio Expansion Board Configuration	Report alarm at end of day.
252		Check Auto Fresh Air Exchange Circuit	Report alarm at end of day.
253		Theft Deterrence	Report alarm at end of day.
254		Check Auxiliary Coolant Temp Sensor	Report alarm at end of day.

PRECEDENT 800 SERIES PEUGEOT DIAGNOSTIC TROUBLE CODES (DTC)

If the Peugeot Engine Control Unit (ECU) determines an engine related problem exists, one or more Peugeot Diagnostic Trouble Codes (DTC's) will be set by the ECU. As a result, one or more Thermo King 8xx codes will also be set and displayed on the HMI Control Panel and the ServiceWatch Data Logger as shown below.

COLOR CODE DEFINITIONS	OK TO RUN	CHECK AS SPECIFIED	TAKE IMMEDIATE ACTION
-------------------------------	------------------	---------------------------	------------------------------

THESE ARE SUGGESTIONS ONLY. ALWAYS CONSULT YOUR COMPANY FOR FINAL DECISIONS.

Num	Color	Description	Operator Action
800		Crankshaft Position Sensor Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
801		Camshaft Position Sensor Error	Report alarm at end of day.
802		Reserved	
803		Reserved	
804		Engine Coolant Temperature Sensor Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
805		Reserved	
806		Reserved	
807		Fuel Temperature Sensor Error	Report alarm at end of day.
808		Rail Pressure Sensor Error	Unit cannot operate in Diesel Mode and is shut down. Repair immediately.
809		Intake Air Pressure Sensor Error	Unit cannot operate in Diesel Mode and is shut down. Repair immediately.
810		Atmospheric Pressure Sensor Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
811		Glow Plug Circuit Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
812		Reserved	
813		General Injector Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
814		Reserved	
815		Fuel Pressure Regulator Error	Unit cannot operate in Diesel Mode and is shut down. Repair immediately.
816		Reserved	
817		Internal ECU Error	Unit cannot operate in Diesel Mode and is shut down. Repair immediately.
818		EGR Valve Actuator Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
819		ECU Power Relay Error	Report alarm at end of day.
820		Main ECU Relay Error	Report alarm at end of day.
821		Reserved	
822		Reserved	
823		Reserved	
824		Reserved	
825		T1 Air Intake Temperature Sensor Error	Report alarm at end of day.
826		T2 Air Intake Temperature Sensor Error	Report alarm at end of day.
827		EGR Valve Position Sensor Error	Report alarm at end of day.
828		Lambda System Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
829		Engine Communication Error	Report alarm at end of day.
830		Air Flow Meter Error	Report alarm at end of day.
831		Oil Pressure Sensor Defective	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
832		Engine Power Supply Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
833		High Pressure Pump Fuel Metering Unit Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
834		Water in Fuel Sensor Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
835		Reserved	
836		Major ECU Failures	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
837		Reserved	
838		Intake Air System Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
839		Engine Speed Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
840		Fuel Injection Energizing Error	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
841		High Pressure Pump Wear	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
842		Engine Running in Safe Mode – Low Speed	Report alarm at end of day.
843		Fuel Injection System Error	Report alarm at end of day.
844		Engine Failed to Crank	Report alarm at end of day.
845		Starter Relay Error	Report alarm at end of day.
846		T50 Switch Error	Report alarm at end of day.
847		Variant Coding Error	Report alarm at end of day.

848		High Coolant Temperature Shutdown	No DTC
849		High Coolant Temperature Warning	No DTC
850		Oil Pressure Fault	No DTC
851		Oil Level Fault	No DTC
852		Water Detected in Fuel	No DTC
853		Engine Overspeed	No DTC
854		Engine Protection Self Shutdown	If unit is shut down repair immediately. Otherwise, report alarm at end of day.
855		Malfunction Indicator Lamp	No DTC