




**RH-404**  
**2008 700 Model**  
**Update**

## **Update for RH-404 Installation in 2008 Model Rhino**

**Step 1:** Remove heat sink on driver side cross bar, it will take a 10mm wrench. The heat sink will be remounted using the same bolts. At the same time on the back of the headlight assembly on the driver side you will need to turn the rubber headlight access plug in the opposite direction or (inside out).

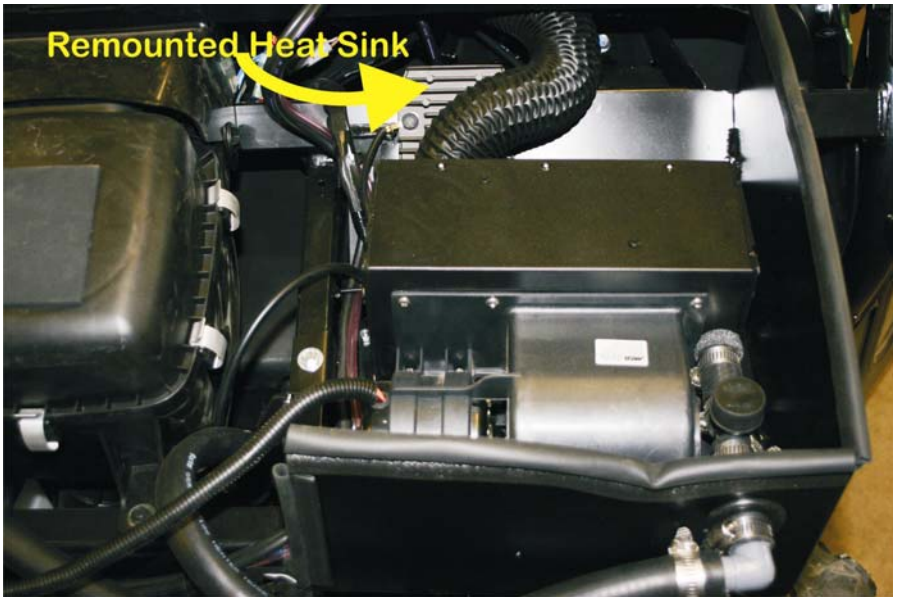

**Step 2:** Put foam tape on the driver sided top shock mount. The heater box will be setting on the mount.

**Step 3:** Set heater box in place making sure not to pinch any wires or hoses.



**Step 4:** Remount the Heat sink as shown in the first photo. Also attach the included bracket.

**STOP!! If this heater is being installed in a 450 or 660 refer back to Step 7 in main instruction manual for correct Coolant Hose connections.**

**Step 5:** Using the provided “Tee’s” and short pieces of “1 inch” radiator hose.

Disconnect the driver side radiator hose, put one of the short pieces of hose on the radiator then put “Tee” in the line, then re-connect the driver side hose to the “Tee” you just installed.

With this done install the  $\frac{3}{4}$ ” hose to the “Tee” you just installed, next run the hose to the bottom connector on the heater.

Follow this same procedure on the passenger side radiator hose using the other provided “Tee” and piece of

1" hose, run the other ¾" hose to the top connector on the heater core.

**NOTE:** The "Tees" are tight fitting; a little lube makes the job a little easier.

**NOTE:** When closing the hood a plastic rib in the hood may hit on the heater box, trim out a small portion of the plastic rib so hood closes properly

**Follow the regular installation manual for the remainder of the installation.**

**If further technical assistance is needed please call:**

**888-927-9722 or**

**218-327-9722 and ask for "Bill" in the technical department.**

