



Service Bulletin

Date: November 18, 2009

Product Line: Snowmobile

Bulletin No: 2010-1-08

Subject: Upper Rear A-Arm Axle

Affected Models: All 2010 500 Sno Pro (2010 600 Sno Pro*)


Condition: On the affected models, the upper rear A-arm axle was installed in the upper A-arm from the rear which is **incorrect**.

Solution: Remove the upper rear A-arm axle from the upper A-arm; then install A-arm axle from the front according to the instructions below.

Instructions: 1. With the front of the snowmobile elevated, remove the left-side lock nuts and cap screws securing the upper A-arm to the chassis.


2. Remove the upper rear axle from the upper A-arm and install from the front. See Fig. 1 and 2.

Fig. 1

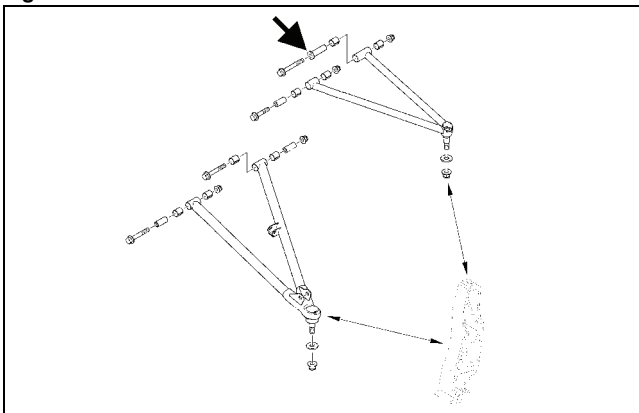

SNO-2183A

Fig. 2

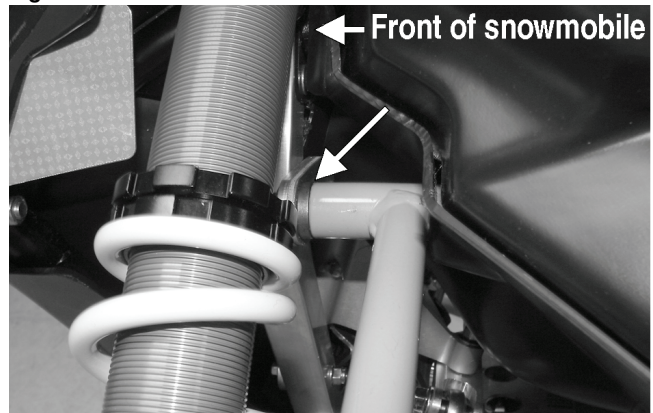

SNO-515A

3. Secure the upper A-arm to the chassis using existing cap screws and lock nuts; then repeat for opposite side. Tighten to 40 ft-lb.

Warranty: A labor allowance of 0.3 hr will be paid per affected snowmobile.

■ **NOTE*:** 2010 600 Sno Pro's are not covered under Arctic Cat's warranty policy as they are considered race snowmobiles, but they still need this correction completed.

■ **NOTE:** It is required to enter the current mileage of each affected model at the time the claim is submitted.

ATTENTION

To ensure that the necessary service work is completed in a timely manner and that this issue can be resolved, Arctic Cat is requesting that all service work be completed prior to November 18, 2010. All warranty claims directly related to this issue will not be honored after November 18, 2010, without prior approval.



Bulletin de Service

Date: Le 18 novembre 2009

Ligne de produit: Motoneige

Numéro de bulletin: 2010-1-08

Objet: Axe de bras en « A » arrière supérieur

Modèles concernés: Tout modèles 500 Sno Pro de 2010 (600 Sno Pro de 2010*)


Condition: Sur les modèles concernés, l'axe de bras en « A » arrière supérieur a été installé sur le bras en « A » supérieur en partant de l'arrière, ce qui est incorrect.

Solution: Retirer l'axe de bras en « A » arrière supérieur du bras en « A » supérieur; installer ensuite l'axe de bras en « A » en partant de l'avant conformément aux instructions ci-dessous.

Instructions:


1. En ayant d'abord élevé le devant de la motoneige, retirez les écrous de blocage et les vis à capuchon du côté gauche fixant le bras en « A » au châssis.
2. Retirez l'axe arrière supérieur du bras en « A » supérieur et installez-le en partant de l'avant. Consultez l'III. 1 et 2.

III. 1

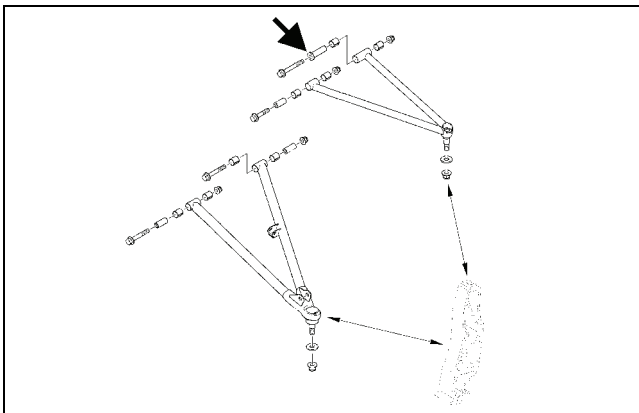

SNO-2183A

III. 2

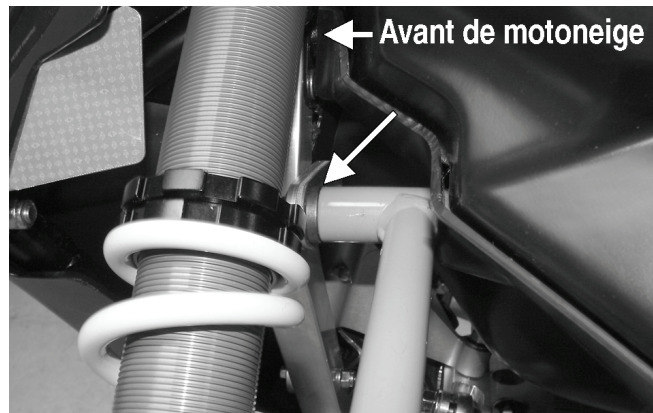

SNO-515F

3. Fixez le bras en « A » supérieur au châssis à l'aide des vis à capuchon et des écrous de blocage retirés au début; répétez du côté opposé. Serrez à un couple de 40 lb-pi.

Main-d'oeuvre: Une allocation de main-d'oeuvre de 0,3 h sera payée par motoneige concernée.

■ **REMARQUE*:** Même si les modèles 600 Sno Pro 2010 ne sont pas couverts par la garantie Arctic Cat parce qu'ils sont considérés comme des machines de course, cette correction doit être complétée.

■ **REMARQUE:** Le kilométrage actuel de chaque modèle visé doit être indiqué au moment de soumettre la réclamation.

⚠ ATTENTION

Pour s'assurer que le travail de révision nécessaire soit complété rapidement et que ce problème peut être réglé, Arctic Cat demande que tout travail de révision soit complété avant le 18 novembre 2010. Toutes réclamations de garantie directement en rapport à ce problème ne seront plus acceptées après le 18 novembre 2010 sans préautorisation.