

RangerWare

By  POLARIS®



RangerWare RZR Fiberglass Windshield Installation Instructions

FIBERGLASS WINDSHIELD

KIT P/N: 28788057

Application:

Polaris RZR MY 2010

Before you begin, read these instructions and check to be sure all parts and tools are in your kit. Retain these installation instructions for future reference.

To see a colored version of these instructions go to the Kit Instruction Lookup screen under Service and Warranty on the dealer web site.

This Package includes the following hardware kit:

RZR windshield hardware kit

Qty	Description
2	Clamp Vinyl 1-3/4"
2	Spacer 2"
2	Coupler 3/8"-16 x 1.125"
2	Bolt MS 3/8-16 x .75" BHSCS
2	Bolt 1/4-20x3 UNC BHSCS
2	Nut Nylock 1/4-20 UNC
2	Washer 5/8"
2	Washer 1"
2	1/4 " bonded Washer
2	3/8" bonded washer

You will need to supply:

Alan bit Cordless drill
7/16" Wrench

IMPORTANT: To ensure satisfactory installation, perform all installation steps correctly in the sequence as shown in these instructions.

INSTALLATION INSTRUCTIONS

Installation Order

1. Heater
2. Wipers in Windshield
3. Windshield (bottom bolts only with Top)
4. Rear Panel
5. Top Panel

INSTALLATION INSTRUCTIONS

NOTES:

- *Leave all fasteners loose until all parts are all installed and located properly.*
- *Use Rubber Bonded Washers on the exterior of all fasteners*
- *Use Flat Washers under all Nylock nuts.*
- *Use 1" Fender Washers between the Vinyl coated clamps and the nuts*
- *Tighten fasteners only until a slight dimple appears in the gelcoat finish. DO NOT OVER TIGHTEN*
- *The Windshield, Roof and rear Panel may be installed individually or in any combination. The location and use of the clamps, spacers and fasteners remains the same omitting only the Fiberglass panel as needed. Follow the instructions for the panels to be installed and align the mounting holes in the Roof with the holes in the Windshield (front) and rear panel (rear) before installing the fasteners.*

1. Installing the windshield. Place clamps on the roll bar before setting windshield in place. See figure 1.



Figure 1

2. Remove the upper bolt from the lower portion of the front roll bar. The bolt will need to be turned so the bolt head is on the inside of the roll bar. Install one coupler on each side of the machine. Tighten the bolt into the coupler. See figure 2



Figure 2

3. Set the windshield in place. Loosely fasten the lower portion of the panel first. Use the two supplied 3/8"-16 x 3/4" bolts with Bonded Washers. Next install 3" bolts into the two inner holes on the top of the windshield panel. Figure 3



NOTE: If applicable install the rear panel and roof before installing the top fasteners in windshield

Figure 3

4. From the inside of the windshield panel install the 2" spacer as shown in figure 4 ("Insert" end down). Be sure to tighten firmly.

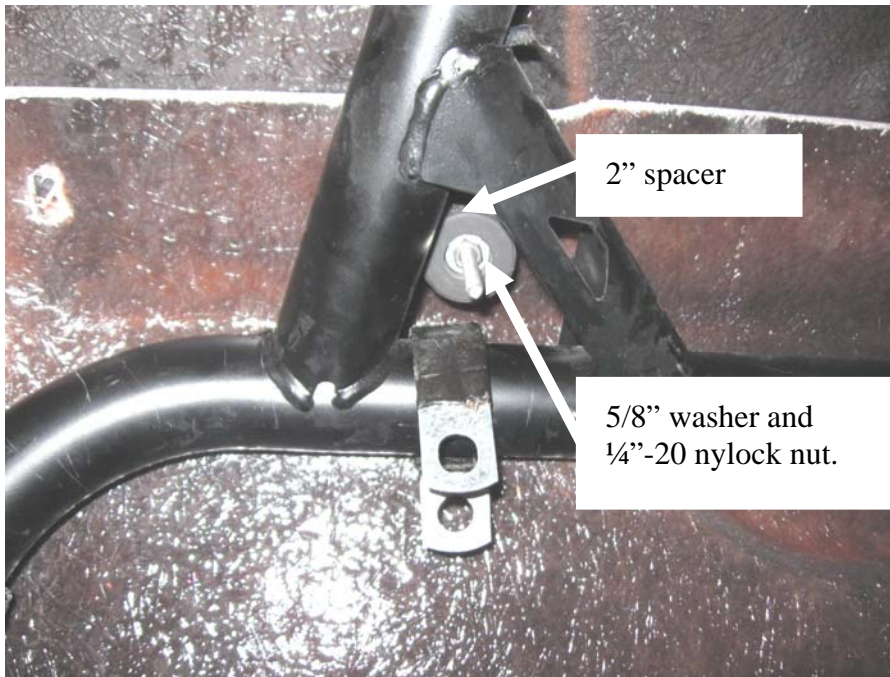


Figure 4

5. Align the spacers to the clamps on the front of the roll bar and secure them as shown in figure 5.



Figure 5

6. Press the bottom of the windshield down firmly into the dash and tighten the bottom and the top fasteners.

7. Care and cleaning of fiberglass. For general cleaning use warm soap water or window cleaner. **DO NOT USE LACQUER THINNER OR ACETONE.** The exterior surfaces can be lightly buffed if needed. Waxing is recommended every 6-12 months.